


Disco ball

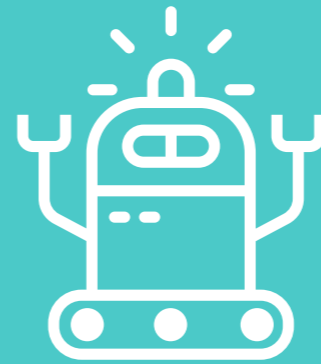

1

2

3

DISCO BALL






What you will need:



Cardboard

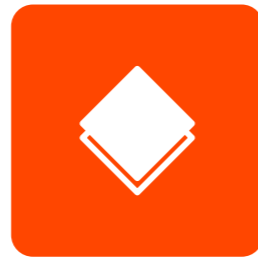

Transparent paper



Calliope mini



Acrylic ball
(Transparent 10 cm [4"])




Scissors




Rubber band




Batteries

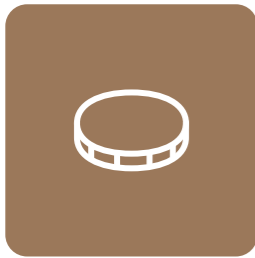



Cut a circle of 9 cm [3,5"] diameter out of the cardboard.

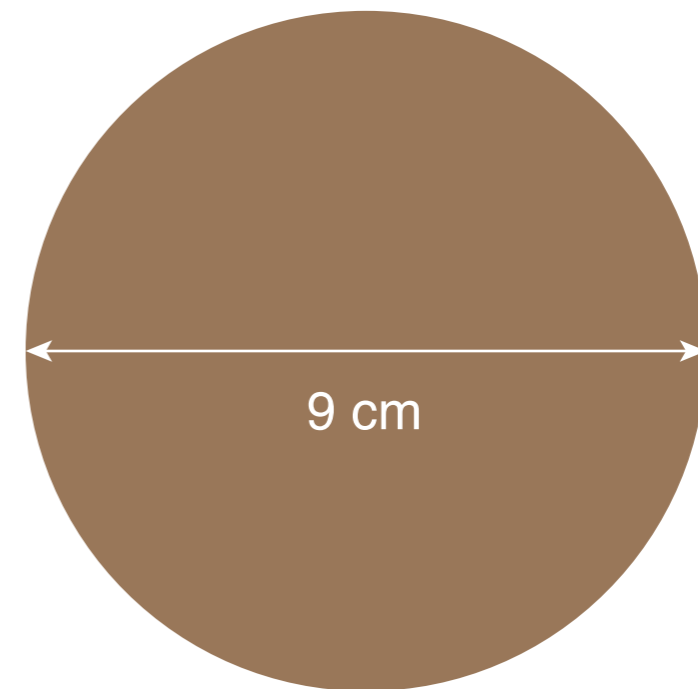

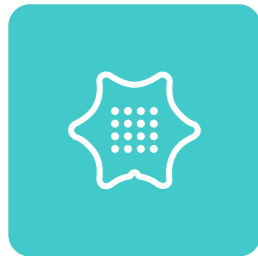




Attach a rubber band to the Pin 0 of your Calliope mini.

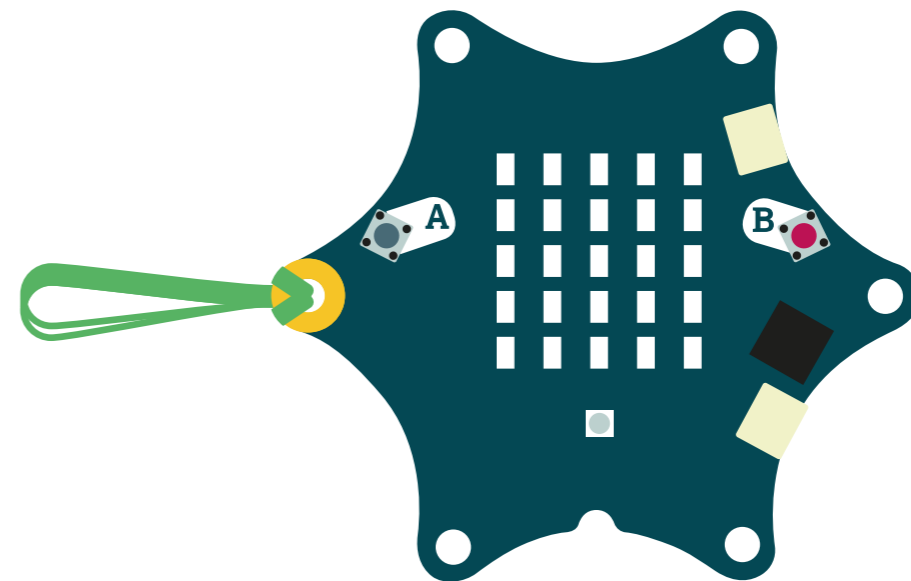

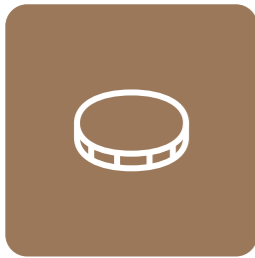

Fasten your Calliope mini to the cardboard by putting the rubber band around the cardboard disc and tightening it e.g. around a Grove connector.

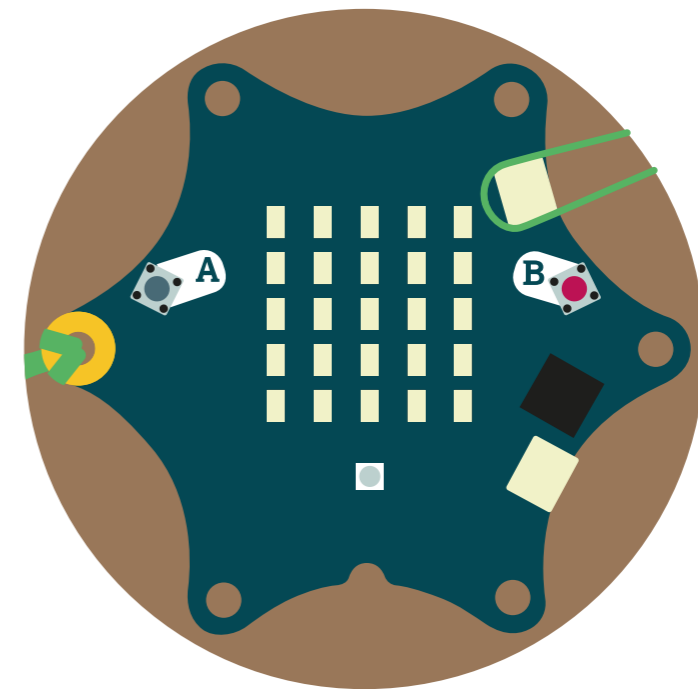

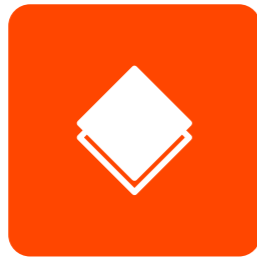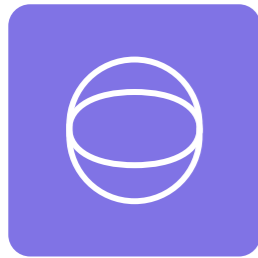

Take both halves of the acrylic ball and fill them with transparent paper.

Finally, connect the battery compartment to your Calliope mini and insert everything into the ball.

